


User Manual

Model Number: BOOK100

I. Product Overview

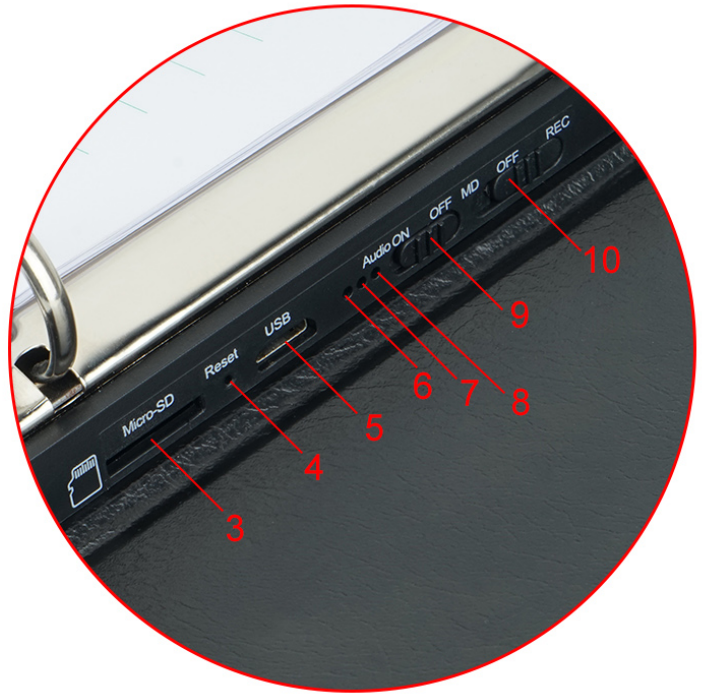

1. Camera Lens
2. PIR Sensor
3. Micro SD Card Slot
4. Reset Button
5. USB Port
6. Blue Indicator Light
7. Red Indicator Light
8. Yellow Indicator Light
9. Audio Switch

10. Mode Switch

II. What's in the Box

-1 x Book Camera

-1 x USB Cable

-1 x DC5V 1A Charger Adapter

-1 x 16GB Micro SD Card (fitted into the Micro SD card slot already)

III. Operation

>> Please make sure your book camera is fully recharged before using.

>> Please make sure the Micro SD card has been formatted already and is securely fitted into the camera's SD card slot, or the camera will not work. We recommend you to use a micro SDHC Class 10 memory card.

>> Slide the Audio Switch to the ON position if you want to record video with audio.

Note: If no Micro SD card is fitted into the camera, the camera will shut down automatically. The blue indicator light will flash 10 seconds and turn off if the Mode Switch is in the REC position; the red indicator light will flash 10 seconds and turn off if the Mode Switch is in the MD position.

3.1 POWER ON/OFF & VIDEO RECORDING

3.1.1 Slide the Audio Switch to the "ON" position, slide the Mode Switch to the "REC" position to power on the camera and start video recording. The blue indicator light will come on and flash 3 times, then turn off.

3.1.2 Slide the Mode Switch to the "OFF" position to stop recording, the blue indicator light will flash 3 times and then off. Slide the Audio Switch to the "OFF" position to power off the camera, all the indicator lights will be off.

Note:

1). A video clip will be generated and saved every 10 minutes automatically.

2). The book camera can record video for 3 hours continuously on a full charge.

3). *Video Resolution: 1920x1080P*

Video Format: AVI

4). *If the camera is in low battery, the camera will save all video files and then shut down automatically. Both blue and red indicator lights will flash for 5 seconds and then turn off.*

3.2 MOTION DETECTION VIDEO RECORDING

3.2.1 Slide the Mode Switch to the MD position, the camera will enter into motion detection recording mode. The blue indicator light will come on and then turn off, the red indicator light will flash 4 times and then turn off. The camera will record video automatically when a movement is detected.

3.2.2 Slide the Mode Switch to the OFF position to exit motion detection recording mode and turn off the camera. The blue indicator light will flash once and then turn off.

Note: Each video length is 5 minutes in the motion detection video recording mode.

IV. Video/Image Files Uploads

4.1 Power off the camera, remove the Micro SD card from the camera.

4.2 Insert the memory card into a proper PC with a card reader.

4.3 Removable disk drive folder appears.

4.4 Click on the drive in the root directory to view, copy or delete the video files.

V. Setting Time/Date Stamp

5.1 Power off the camera, remove the Micro SD card from the camera.

5.2 Insert the memory card into a proper PC with a card reader.

5.3 Removable disk drive folder appears.

5.4 Click on the drive in the root directory and inside the root directory, open the txt file named "**YM-TIME.TXT**".

5.5 Write the current date and time in the file "**YM-TIME.TXT**" with the correct format:

YYYY/MM/DD HH:MM:SS (For example: 2016/03/08 14:24:32). Save this file.

5.6 Restart the camera and the system will upgrade the program automatically.

Note: There is a "yes" in the file named "YM-TIME.TXT", and you can't change it into "no", otherwise the video files cannot be saved in the Micro SD card. If you have done the above actions, all you need to do is to change the "no" into "yes", and then reset the camera (See VII).

VI. Battery Charging

6.1 Power off the camera, connect the camera to an external power source by using the USB cable and DC 5V 1A USB charger adapter.

6.2 During the charging process, the yellow indicator light will be solid on, both blue and red indicator lights will flash consistently at the same time.

6.3 It will take about 6.5 hours to obtain a full charge.

6.4 The yellow indicator light will be solid on when the camera is fully recharged, both blue and red indicator lights will stop flashing.

VII. Reset

If for any reason the camera stops responding or isn't working properly, a quick reset will restore it back to normal operation.

Operation: When the camera is powered on, use a pin to press the Reset Button once, the camera will restart to default settings in about 5 seconds.